

Bholanath

Precision Engineering Pvt.Ltd.



User's Manual

Step Servo - BHSS - 750 W BHSSD Step Servo Driver

Note:- Step servo drive & motor are matched pair with **BH-75Vac** power supply

Office Address

Contact Us

Bholanath Precision Engineering Pvt.Ltd.

11,Kembros Industrial Estate,Near Asian Paint Company, Sonapur Lane,Bhandup (West),Mumbai - 400078,India.

FACTORY ADDRESS

Plot No - 1, Gut No - 203, Dahagaon, Vasind (West), Wada Link Road, Off Mumbai Nashik Road, Opposite Jindal Steel Factory, Taluka - Shahpur, District - Thane - 421 302, Maharashtra State, India.

Phone No: -

+91 - 9821671733 +91 - 9920903825 +91 - 9930514603 +91 - 9323166582

91 - 22 - 25664338 /25662856 / 67993260

Email: support@bholanath.in

Overview (Step Servo)	3
a. BHSS 750 W - Step Servo	4
1. Drive Circuit Connection With BH-SDC-01 & 02 (Step Se	rvo)5
Drive circuit connection wth PLC And Drive front page	6
Overview (Drive)	7
2.Features	7
3.Ports Introduction	8
3.1 ALM and PEND signal output ports 3.2 Control Signal Input Ports 3.3 Encoder Feedback Signal Input Ports 3.4 Power Interface Ports	 9
4. Technological Index	11
5. Connections to Control Signal ·····	12
5.1 Connections to Common Anode 5.2 Connections to Common Cathode 5.3 Connections to Differential Signal 5.4 Sequence Chart of Control Signals	13 14
6. DIP Switch Setting	15
6.1 Activate Edge Setting 6.2 Running Direction Setting 6.3 Micro steps Setting	16
7. Faults alarm and LED flicker frequency	17
8. Appearance and Installation Dimensions	18
9. Typical Connection	19
10. Processing Methods to Common Problems and Faults	20
10.1 Power on power light off ······	20
10.2 Power on red alarm light on ······	
10.3 Red alarm light on after the motor running a small angle 10.4 After input pulse signal but the motor not running	20

BHOLANATH STEP SERVO MOTORS A





Bholanath Step Servo motors are closed loop stepping systems - high speed (>2000 RPM) stepper motors with incremental optical encoders and digital drives.

Incremental optical encoders (1000 PPR and 2500 PPR) feedback with new generation digital drives, Bholanath Step Servo motors get the reliability of servo motors.

Bholanath Step Servo motors are good replacement of servo motors (25 Watts to 1500 Watts), the price being much lower than servo motors.


Bholanath Step Servo motors give high speed performance of servo motors with accurate feedback and micro stepping accuracy of stepper motors with feedback.

Bholanath Step Servo motors give better holding torque's (complete stand still position).

Comparison between Bholanath Step Servo BHSS - 400 W with 400 Watt servo motor.

As can seen from the graph, the Bholanath Step Servo motor torque equals servomotor torque at 2000 RPM. Thus for applications up to 2000 RPM, Bholanath Step Servo motor can easily be used. At lesser RPM, say at 1000 RPM, the Bholanath Step Servo motor gives 50% more torque than servo, giving the user much better performance.

The Step Servo Motor Driver has automatic current adjustments as per load, resulting in low heat / generation, thereby giving high efficiency.

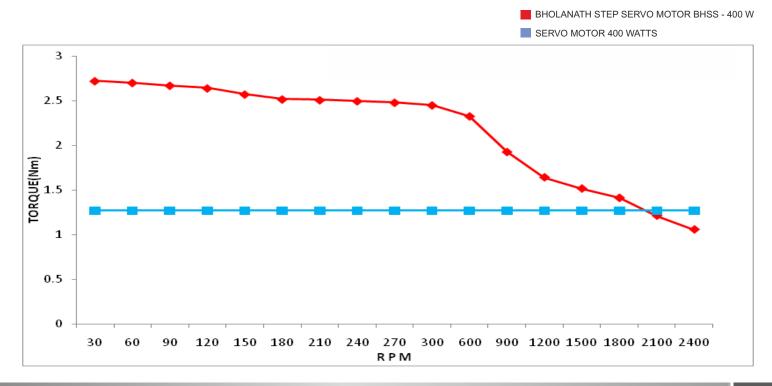

BHSS - 750 W STEP SERVO MOTOR









Closed Loop Stepping System which includes High Speed (>2000 RPM)Stepper Motors with Incremental Optical Encoders, Digital Drives and 3 Meter Cable.

SUITABILITY - The BHSS - 750 W Step Servo is comparable to 750 Watts Servo Motor upto 1100 RPM. The Step - Servo Motor BHSS - 750 W gives more torque at lower RPM's thus giving a better performance than 750 Watts Servo Motors as seen in the graph.

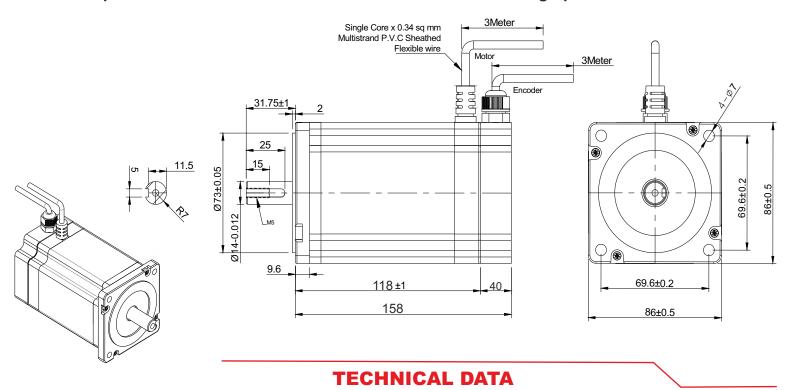

Characteristics

Power Input - BH-75Vac Encoder Options - 1000 PPR/2500 PPR Cable Length - 3 / 5 Meters Motor - Bipolar Hybrid Stepper Motor Step Angle - 1.8 Degree Degree Of Protection - DIN 40050 IP 60 / IP 65 **Insulation Class - H** Weight - 4.95 Kg Current Per Phase - 6.0 A Torque - 8.70 Nm - 2.39 Nm Max. RPM - 0 - 2000 Stock Temperature - (- 10° C to + 40° C) Operation Temperature - (- 10° C to + 70° C) Shaft Axial Play - 0.08 Max.Play (450 G Load) Shaft Radial Play - 0.02 Max.Play (450 G Load) Max. Radial Force - 220 N (20 MM from Front Flange) Max. Axial Force - 60 N (20 MM from Front Flange)

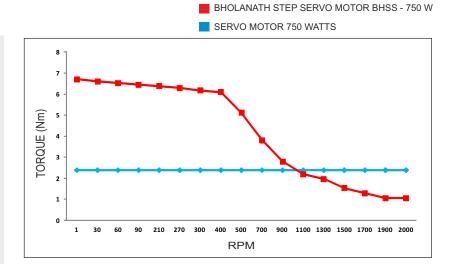


Motor Options Available Standard Model - S With Low Backlash Planetary Gearbox - PL With Electro Magnetic Brake - BR With Spur Gearbox - SG CE Certificate - N - STANDARD/CE - CERTIFIED ORDERING CODE - BHSS- 750 W - S - 1000 - 3MTR.- IP 60-N




DRIVE CIRCUIT CONNECTION






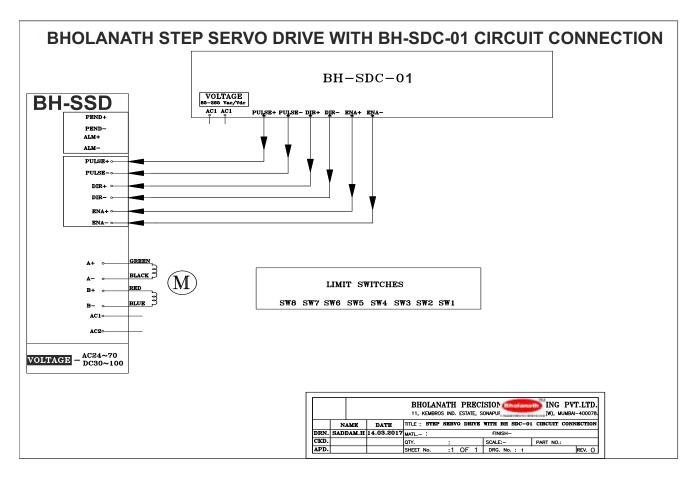

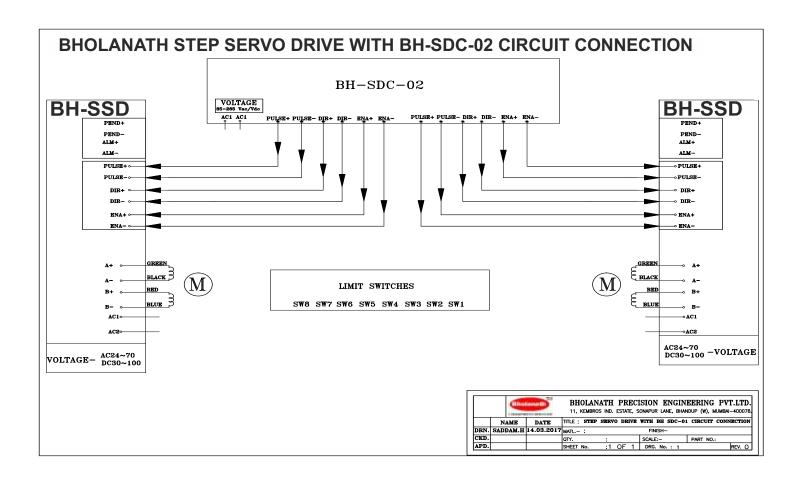



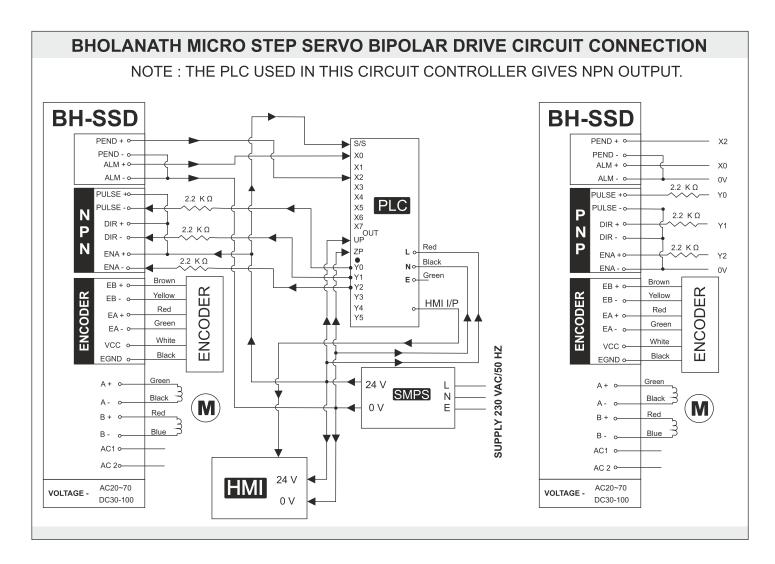

User's Manual



1. Overview

The BHSSD hybrid stepper servo drive system integrates the servo control technology into the digital stepper drive perfectly. And this product adopts an optical encoder with high speed position sampling feedback of 50 μ s, once the position deviation appears. it will be fixed immediately. This product is compatible the advantages of the stepper drive and the servo drive , such as lower heat , less vibration , fast acceleration and so on. This kind of servo drive also has an excellent cost performance.

2. Features

Without losting step, High accuracy in positioning.

100% rated output torque.

Variable current control technology, High current efficiency.

Small vibration, Smooth and reliable moving at low speed.

Accelerate and decelerate control inside, Great improvement in smoothness of starting or stopping the motor.

Compatible with 1000 and 2500 lines encoder.


No adjustment in general applications.

Over current, over voltage and over position error protection.

Green light means running while red light means protection or off line.


3. Ports Introduction



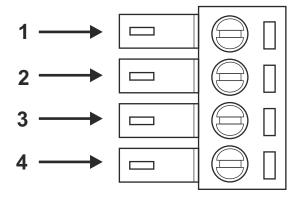


Port	Symbol	Name	Remark
1	PEND +	In position signal output +	
2	PEND -	In position signal output -	
3	ALM +	Alarm output +	
4	ALM -	Alarm output -	

3.2 Control Signal Input Ports

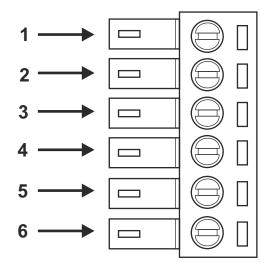


Port	Symbol	Name	Remark	
1	PLS +	Pulse signal +	Compatible with	
2	PLS -	Pulse signal -	5V or 24 V	
3	DIR +	Direction signal +	Compatible with	
4	DIR -	Direction signal -	5V or 24 V	
5	ENA+	Enable signal + Compatible		
6	ENA -	Enable signal -	5V or 24 V	

3.3 Encoder Feedback Signal Input Ports

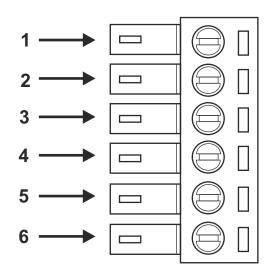


Port	Symbol	Name	Remark
1	EB+	Encoder Phase B +	Brown
2	EB -	Encoder Phase B -	Yellow
3	EA+	Encoder Phase A +	Red
4	EA -	Encoder Phase A -	Green
5	VCC	Input Power	White
6	GND	Input power ground	Black

3.4 Power Interface Ports

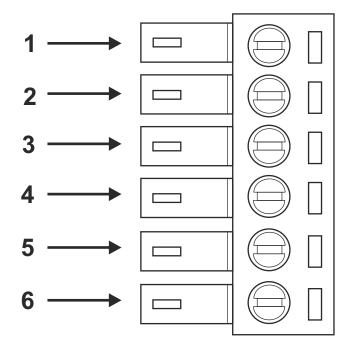


Port	Identification	Symbol Name		Remark
1		A +	Phase A +(Green)	Motor Phase A
2	Motor Phase	A -	Phase A - (Black)	MOTOL Fliase A
3	Wire Input Ports	B +	Phase B + (Red)	Matar Dhaca D
4		В-	Phase B - (Blue)	Motor Phase B
5	Power Input	VCC	Input Power +	AC 24 V - 70 V
6	Ports	GND	Input Power -	DC 30 V - 100 V

4. Technological Index

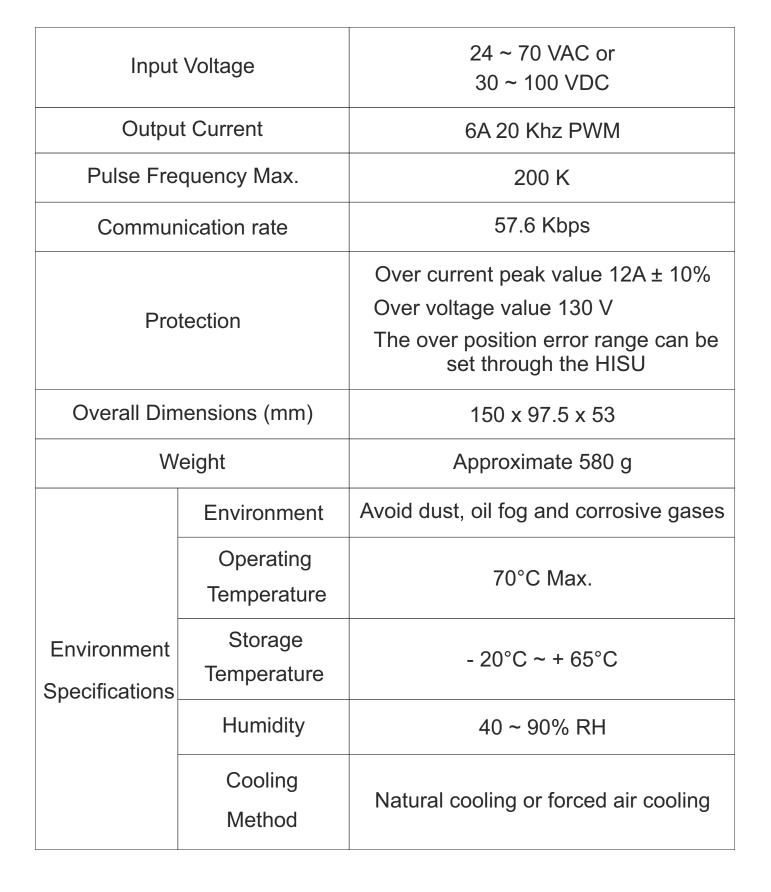

5. Connections to Control Signal


5.1 Connections to Common Anode

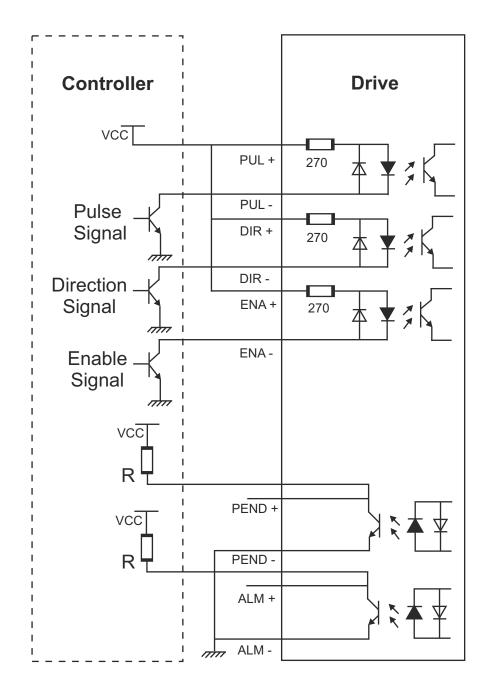

Remark:

VCC is compatible with 5 V or 24 V ; R ($3 \sim 5$ K) must be connected to control signal terminal.


5.2 Connections to Common Cathode

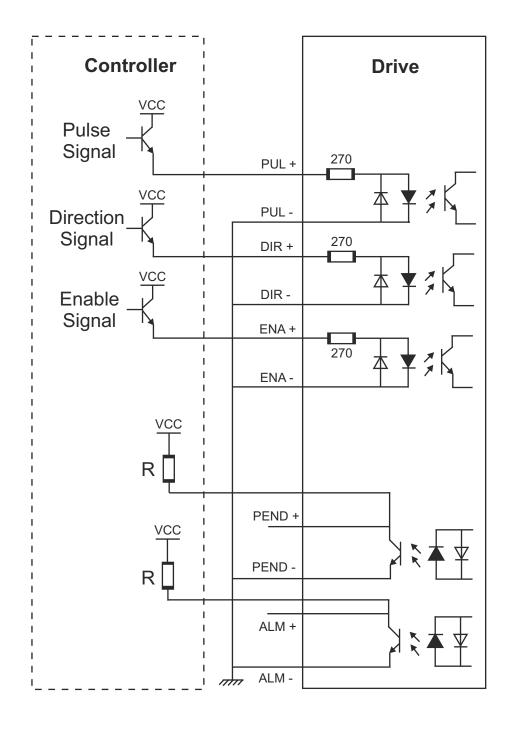

Remark:

VCC is compatible with 5 V or 24 V ; R ($3 \sim 5$ K) must be connected to control signal terminal.

5.3 Connections to Differential Signal

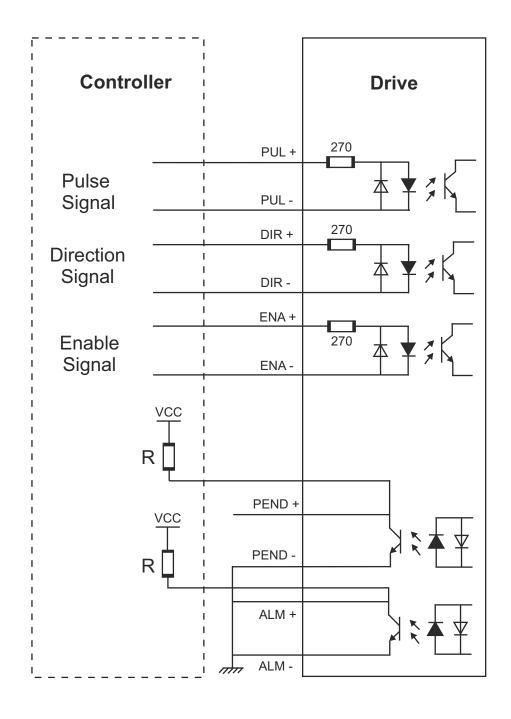


Remark:

VCC is compatible with 5 V or 24 V ; R ($3 \sim 5$ K) must be connected to control signal terminal.

5.4 Sequence Chart of Control Signals

In order to avoid some fault operations and deviations, PUL, DIR and ENA should abide by some rules, shown as following diagram:

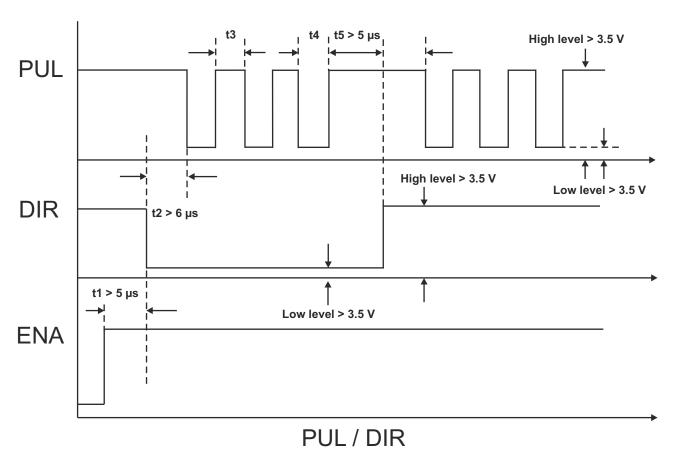

Remark:

- a. t1 : ENA must be ahead of DIR by at least 5 μ s.Usually, ENA + and ENA are NC (not connected).
- b. t2 : DIR must be ahead of PUL active edge by 6 μ s to ensure correct direction.
- c. t3 : Pulse width not less than 2.5 μ s.
- d. t4 : Low level width not less than 2.5 μ s.



6.1 Activate Edge Setting

SW1 is used for setting the activate edge of the input signal, "off 'means the activate edge is the rising edge, while "on " is the falling edge.

6.2 Running Direction Setting


SW 2 is used for setting the running direction, "off "means CCW, while, "on" means CW.

6.3 Micro Steps Setting

The micro steps setting is in the following table, while SW3, SW4, SW5, Sw6 are all on, the internal default micro steps inside is activate, this ratio can be setting through the HISU.

Dial switch Micro Steps	SW3	SW4	SW5	SW6
Default	On	On	On	On
800	Off	On	On	On
1600	On	Off	On	On
3200	Off	Off	On	On
6400	On	On	Off	On
12800	Off	On	Off	On
25600	On	Off	Off	On
51200	Off	Off	Off	On
1000	On	On	On	Off
2000	Off	On	On	Off
4000	On	Off	On	Off
5000	Off	Off	On	Off
8000	On	On	Off	Off
10000	Off	On	Off	Off
20000	On	Off	Off	Off
40000	Off	Off	Off	Off

7. Faults alarm and LED flicker frequency

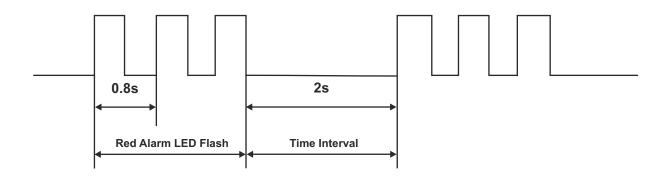


Flicker Frequency	Description to the Faults
1	Error occurs when the motor coil current exceeds the drive's current limit.
2	Voltage reference error in the drive.
3	Parameters upload error in the drive.
4	Error occurs when the input voltage exceeds the drive's voltage limit.
5	Error occurs when the actual position following error exceeds the limit which is set by the position error limit.




8. Appearance and Installation Dimensions



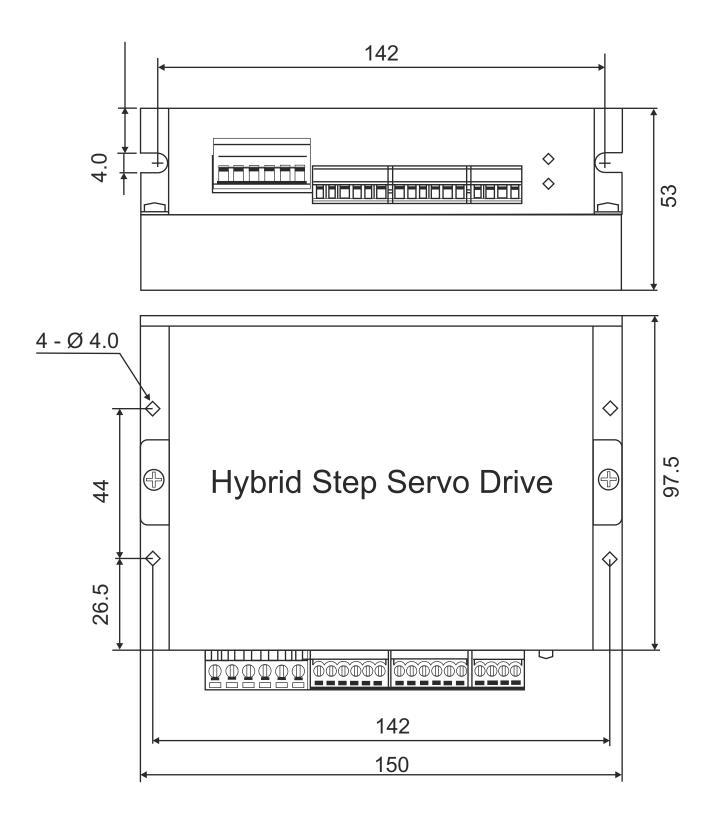

7 9. Typical Connection

This drive can provide the encoder with a power supply of +5V, maximum current 80 mA. It adopts a quadruplicated-frequency counting method, and the resoulation ratio of the encoder multiply 4 are the pulses per rotate of the servo motor. Here is the typical connection of BHSSD.

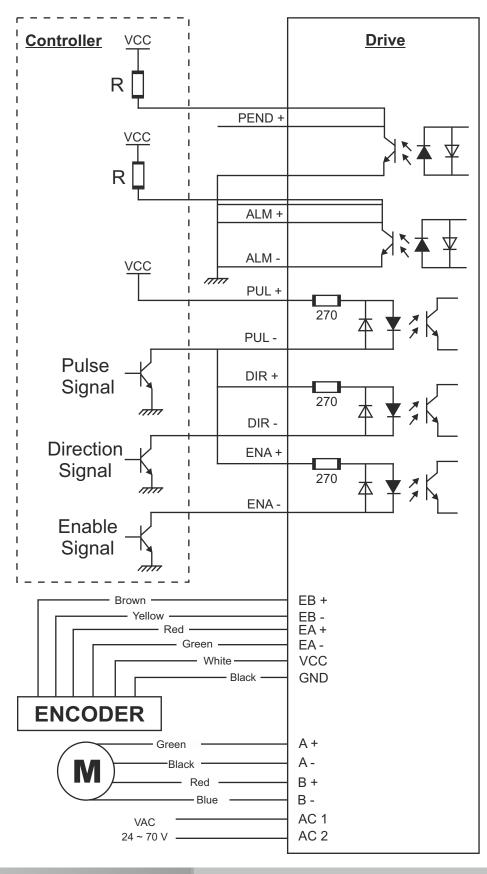



10. Processing Methods to Common Problems and Faults



10.1 Power on power Light off

No power input please check the power supply circuit. The voltage is too low.

10.2 Power on red alarm light on

Please check the motor feedback signal and if the motor is connected to the drive.

The stepper servo drive is over voltage or under voltage. Please lower or increase the input voltage.

10.3 Red alarm light on after the motor running a small angle

Please check the motor phase wires if they are connected correctly, if not. Please refer to the 3.4 Power Ports.

Please check the parameter in the drive if the poles of the motor and the encoder lines are corresponding with the real parameters, if not, set them correctly.

Please check if the frequency of the pulse signal is too fast, thus the motor may be out of the rated speed and lead to position error.

10.4 After input pulse signal but the motor not running

Please check the input pulse signal wires are connected in reliable way.

Please make sure the input pulse mode is corresponding with the real input mode.